


Bottom Stringers

Delta splice a 12" section onto a 48" length of $\frac{1}{4}$ " square spruce for each 60" bottom stringer. Fit the stringers to create a flat bottom. Adjust the notches as necessary to keep the stringers straight. The stringers should follow the plan and bend at BF3 (see photo).

The stringers go from F2 rearward to the tail wheel plate. Sand them to fit flush at the rear.

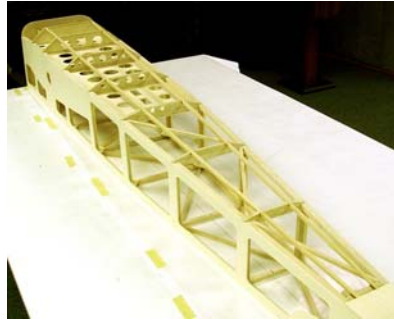

Add $\frac{1}{16} \times \frac{1}{4}$ " cap strips to F2 and F3. This gives a nice surface for sticking down the covering. Center the cap strip on F3 but fit F2's cap strip to the rear of the former.

